
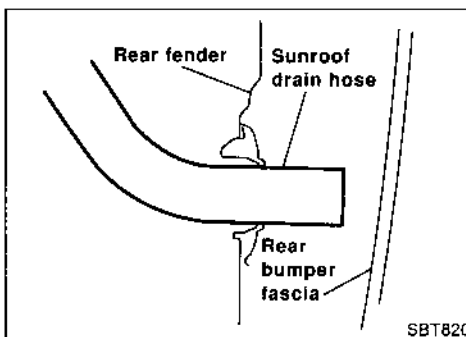
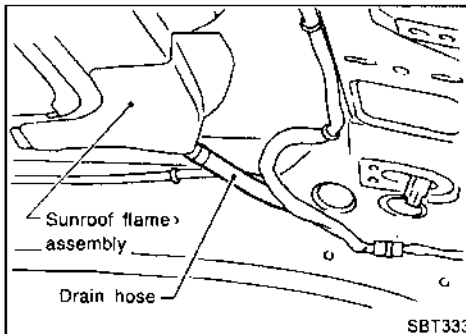


SUNROOF

Trouble Diagnoses (Cont'd)

DRAIN HOSES

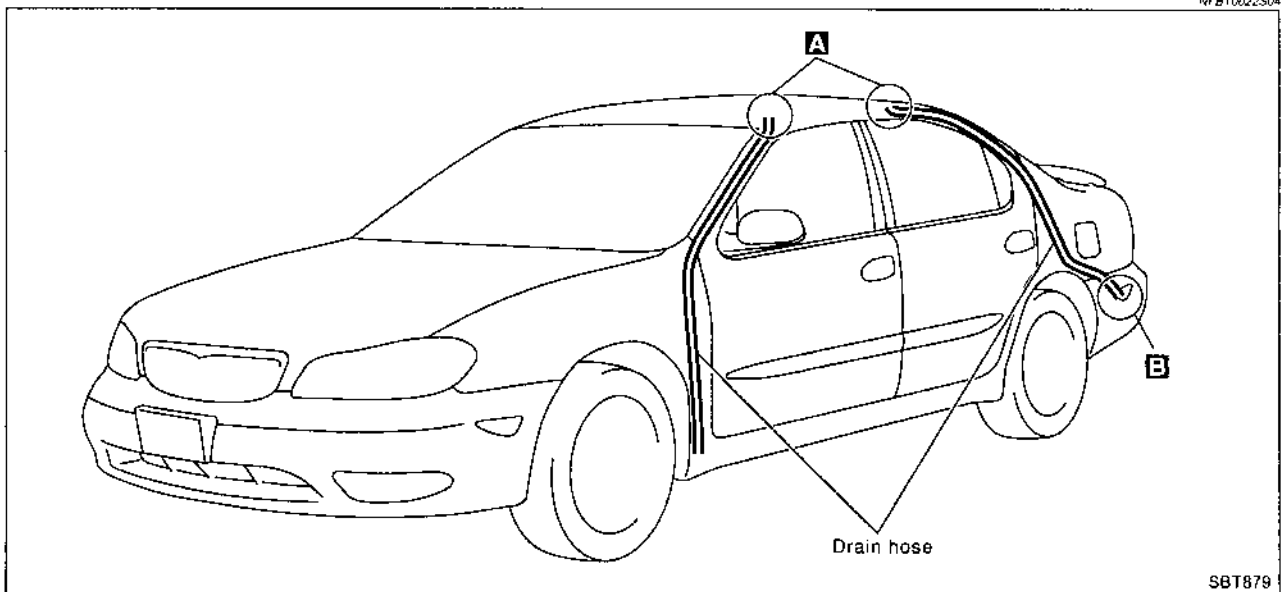

1. Remove headlining to access drain hose connections. (Refer to "ROOF TRIM", BT-29, for detail.)
2. Check visually for proper connections, damage or deterioration. **A** (The figure shows only the front side.)

PILA 1974 @ mca, inc

3. If leakage occurs around luggage room, remove luggage room side trim and check connecting area. Check for proper connection, damage or tear. **B**
4. Remove drain hoses and check visually for any damage, cracks, or deterioration.
5. Pour water into drain hoses and find damaged portion.
- If any damaged portion is found at each step, replace the damaged part.

WEATHERSTRIP

- In the case of leakage around glass lid, close glass lid and pour water over glass lid to find damaged or gap portion.
1. Remove glass lid assembly. (Refer to removal procedures, BT-42, for details.)
 2. Visually check weatherstrip for proper installation. If a gap exists between glass lid and weatherstrip, check for sufficient amount of butyl seal. If required, remove weatherstrip and apply butyl seal.
Refer to "EXTERIOR", BT-32, for details.