


Diagnostic Procedure 10

ACTUATOR SOLENOID VALVE RELAY (LED flashing number 10)

INSPECTION START
Remove battery negative terminal connector.

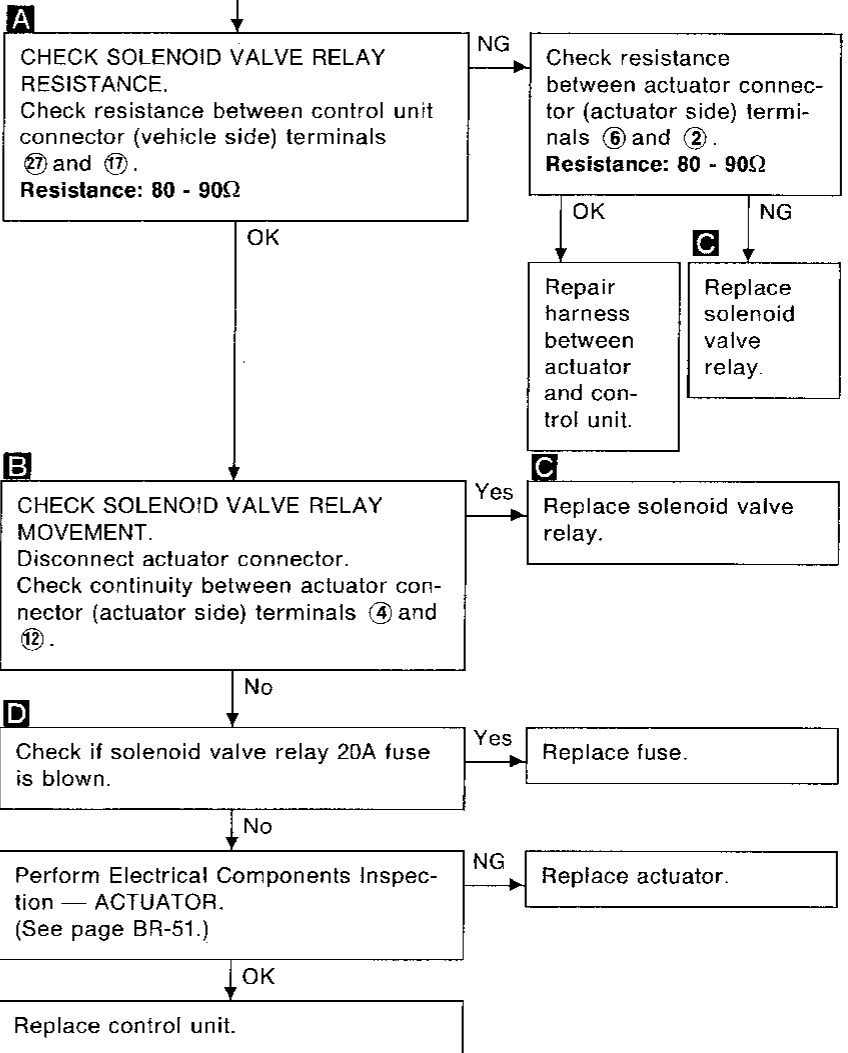

Diagnostic Procedure 11

CONTROL UNIT (LED flashing number 16 or continuous)

