
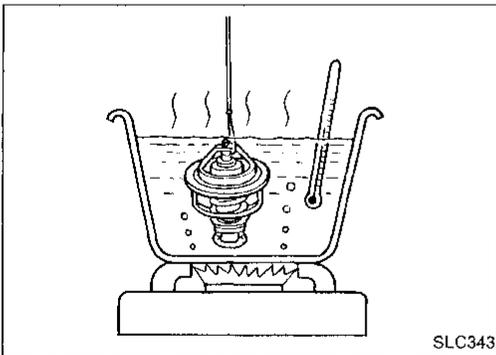


Thermostat

INSPECTION

1. Check valve seating condition at ordinary room temperatures. It should seat tightly.

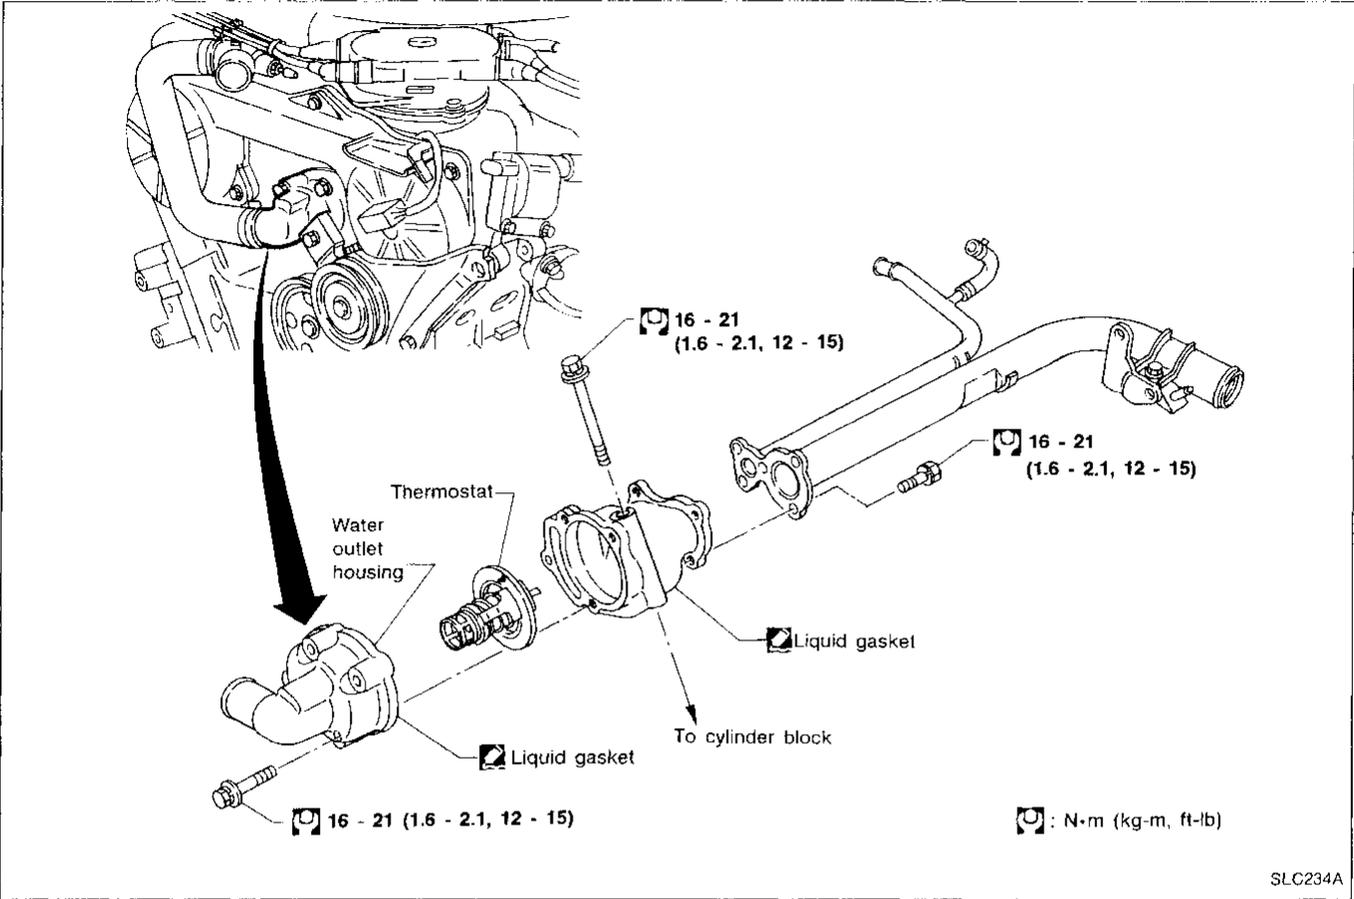

2. Check valve opening temperature and maximum valve lift.

	Standard
Valve opening temperature °C (°F)	82 (180)
Maximum valve lift mm/°C (in/°F)	10/95 (0.39/203)

3. Then check if valve is 5°C (9°F) below valve opening temperature.
 - After installation, run engine for a few minutes, and check for leaks.
 - Be careful not to spill coolant over engine compartment. Use a rag to absorb coolant.